

FIG. 1

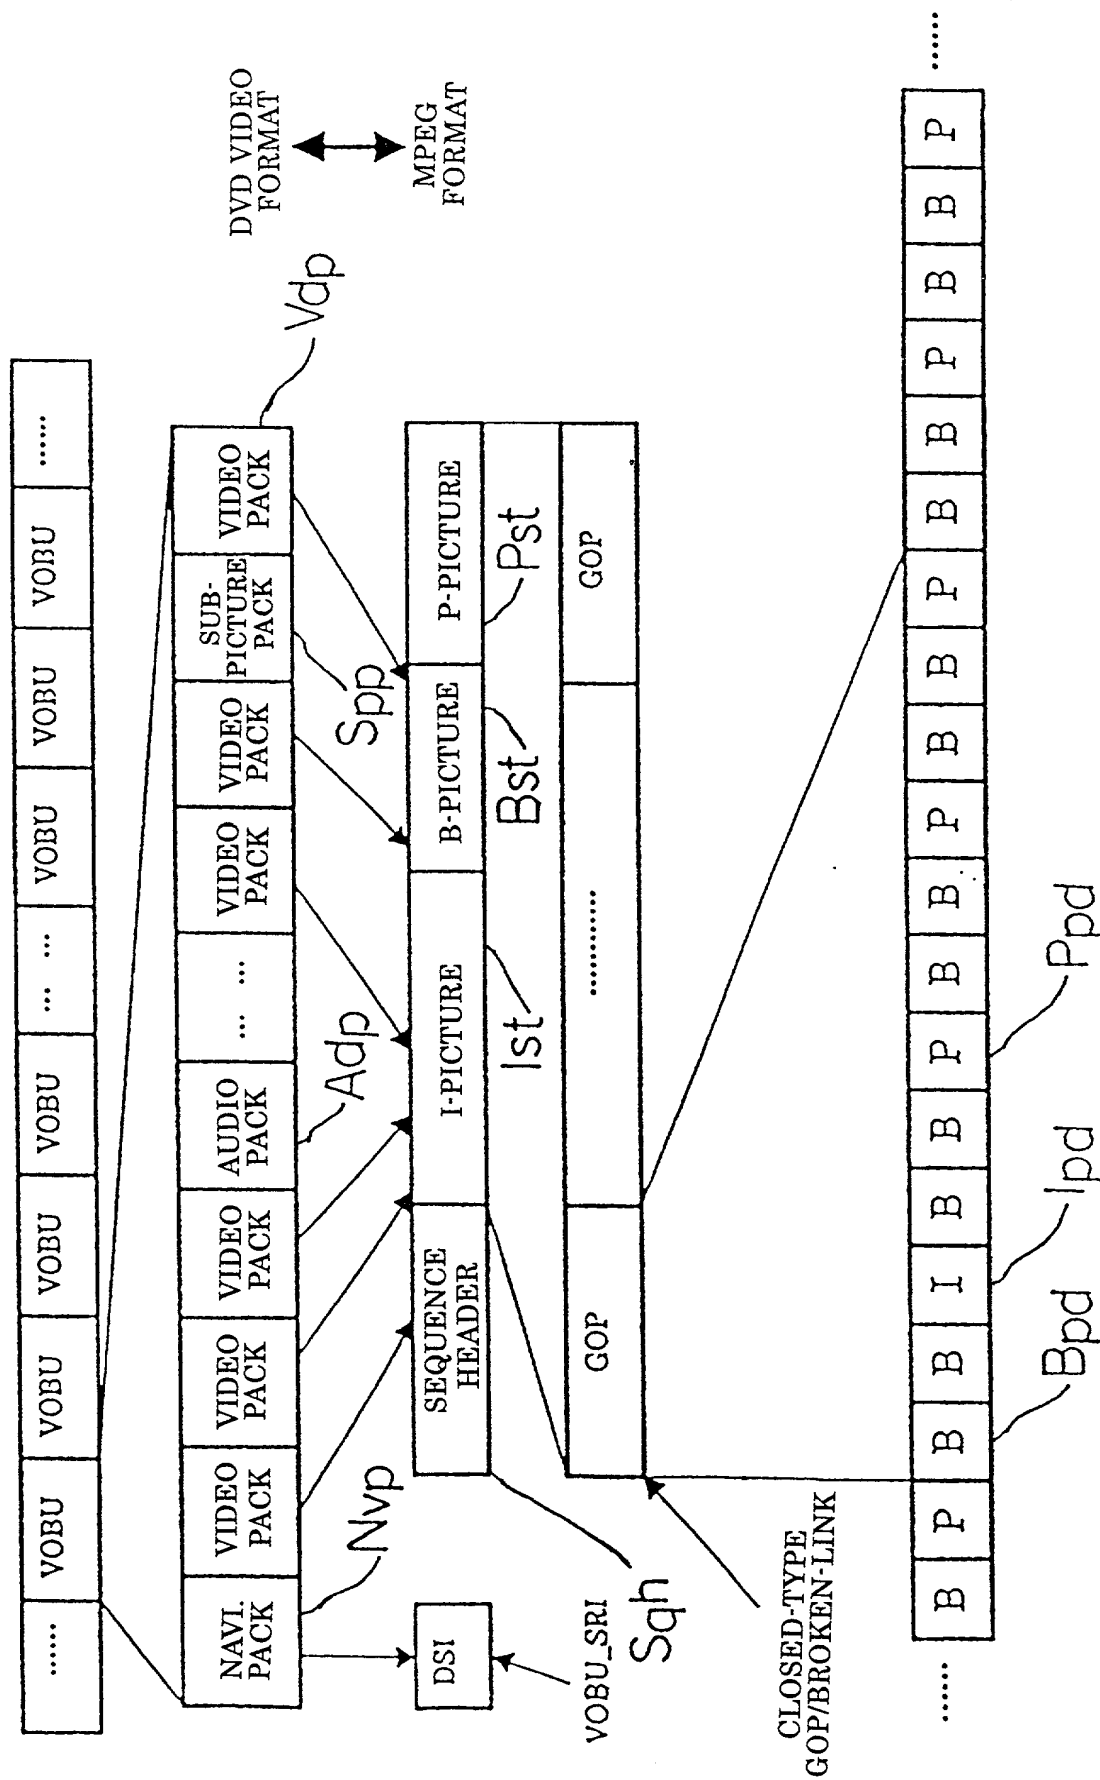


FIG. 2

VOBU_SRI

FWDA240	+ 240 VOBUS START-ADDRESS
FWDA120	+ 120 VOBUS START-ADDRESS
FWDA60	+ 60 VOBUS START-ADDRESS
FWDA20	+ 20 VOBUS START-ADDRESS
FWDA15	+ 15 VOBUS START-ADDRESS
FWDA14	+ 14 VOBUS START-ADDRESS
FWDA13	+ 13 VOBUS START-ADDRESS
FWDA12	+ 12 VOBUS START-ADDRESS
FWDA11	+ 11 VOBUS START-ADDRESS
FWDA10	+ 10 VOBUS START-ADDRESS
FWDA9	+ 9 VOBUS START-ADDRESS
FWDA8	+ 8 VOBUS START-ADDRESS
FWDA7	+ 7 VOBUS START-ADDRESS
FWDA6	+ 6 VOBUS START-ADDRESS
FWDA5	+ 5 VOBUS START-ADDRESS
FWDA4	+ 4 VOBUS START-ADDRESS
FWDA3	+ 3 VOBUS START-ADDRESS
FWDA2	+ 2 VOBUS START-ADDRESS
FWDA1	+ 1 VOBUS START-ADDRESS
BWDA1	- 1 VOBUS START-ADDRESS
BWDA2	- 2 VOBUS START-ADDRESS
BWDA3	- 3 VOBUS START-ADDRESS
BWDA4	- 4 VOBUS START-ADDRESS
BWDA5	- 5 VOBUS START-ADDRESS
BWDA6	- 6 VOBUS START-ADDRESS
BWDA7	- 7 VOBUS START-ADDRESS
BWDA8	- 8 VOBUS START-ADDRESS
BWDA9	- 9 VOBUS START-ADDRESS
BWDA10	- 10 VOBUS START-ADDRESS
BWDA11	- 11 VOBUS START-ADDRESS
BWDA12	- 12 VOBUS START-ADDRESS
BWDA13	- 13 VOBUS START-ADDRESS
BWDA14	- 14 VOBUS START-ADDRESS
BWDA15	- 15 VOBUS START-ADDRESS
BWDA16	- 16 VOBUS START-ADDRESS
BWDA20	- 20 VOBUS START-ADDRESS
BWDA60	- 60 VOBUS START-ADDRESS
BWDA120	- 120 VOBUS START-ADDRESS
BWDA240	- 240 VOBUS START-ADDRESS

FIG. 3

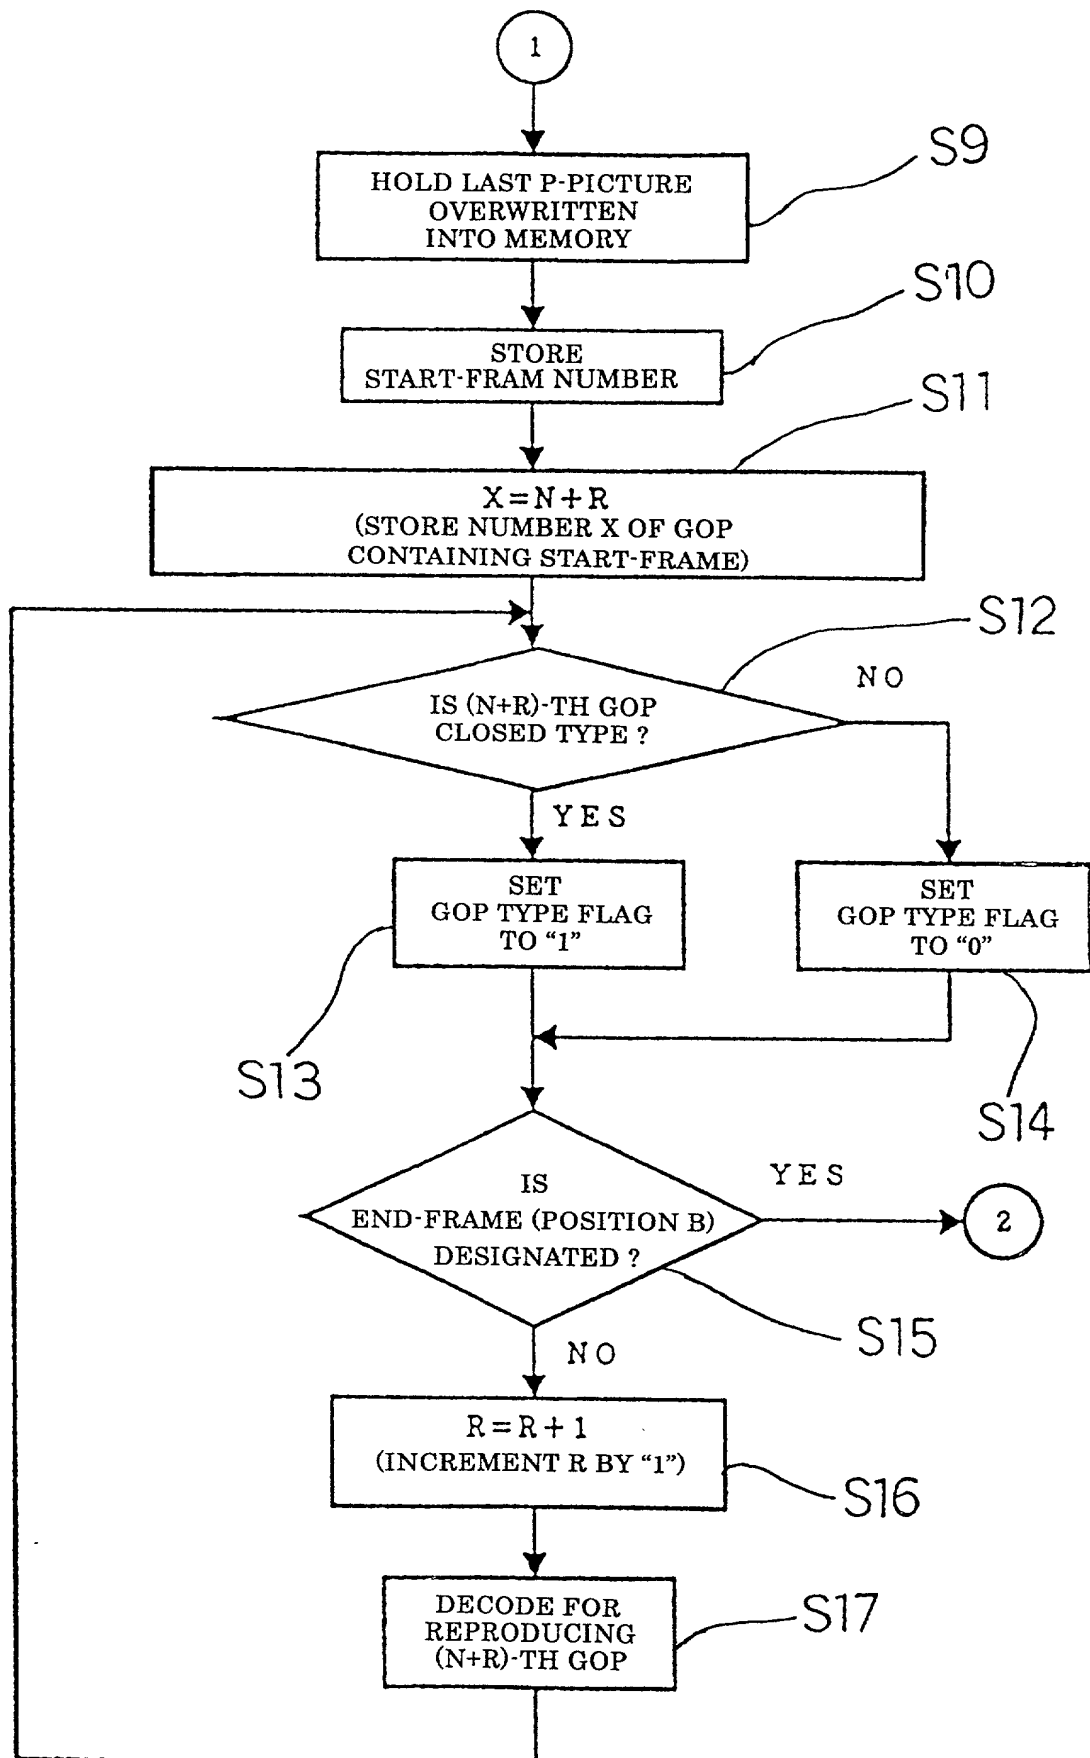


FIG. 4

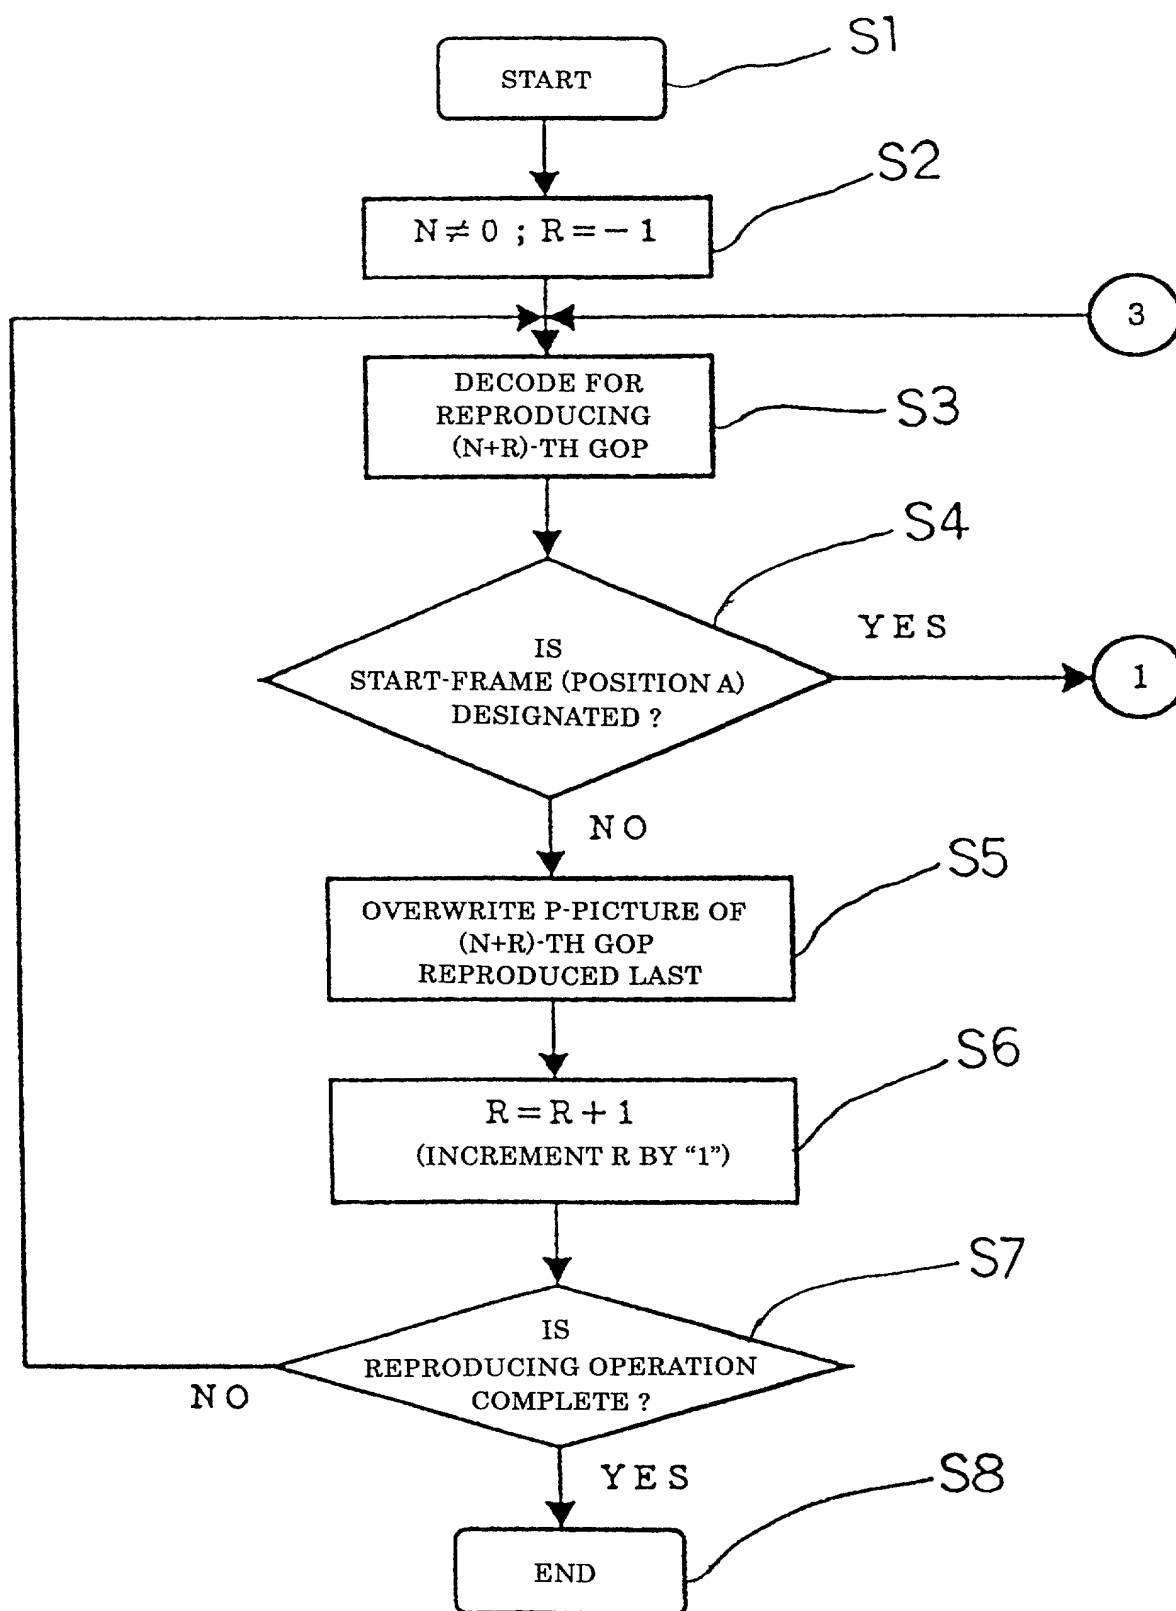


FIG. 5

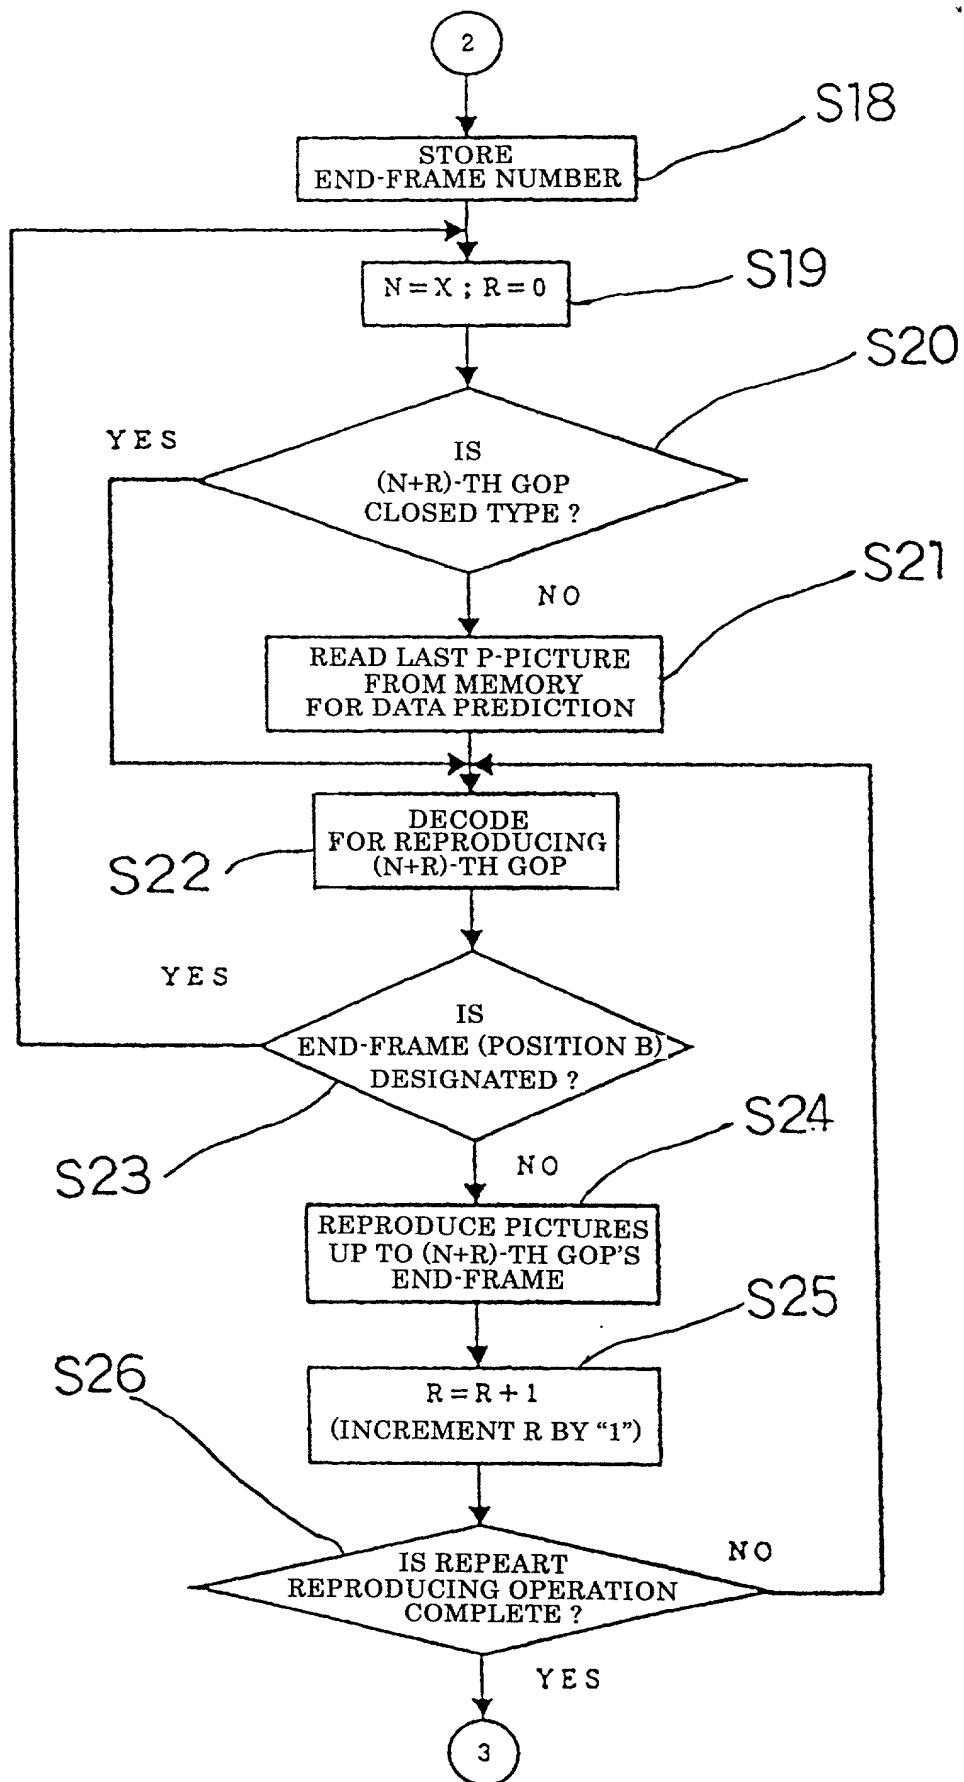


FIG. 6

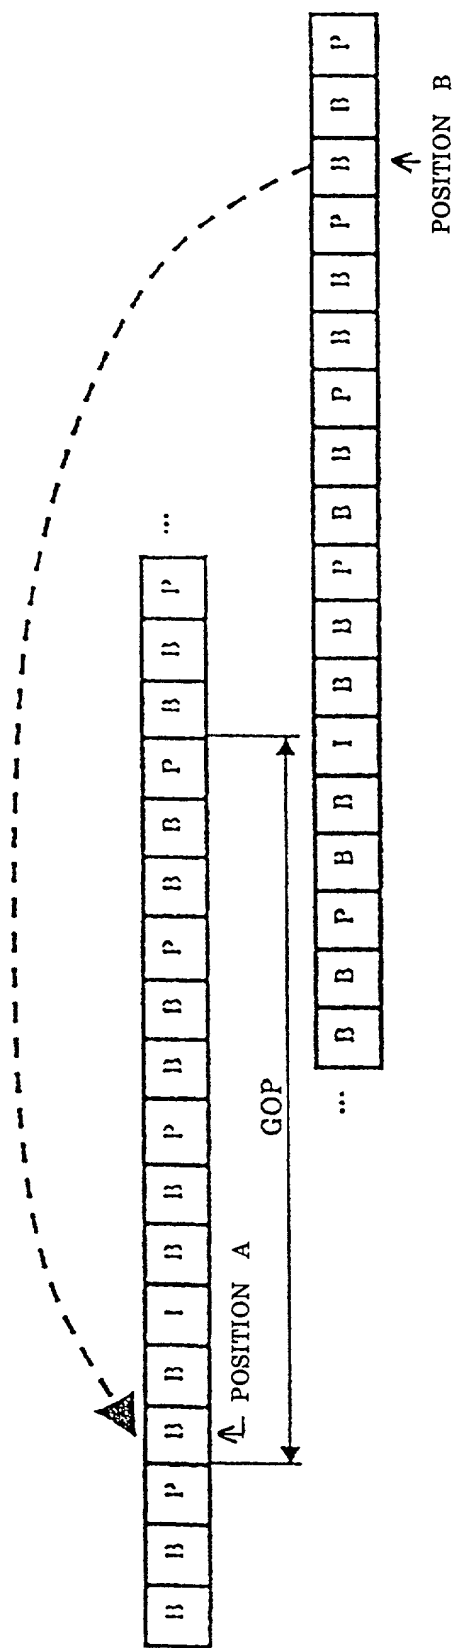


FIG. 7

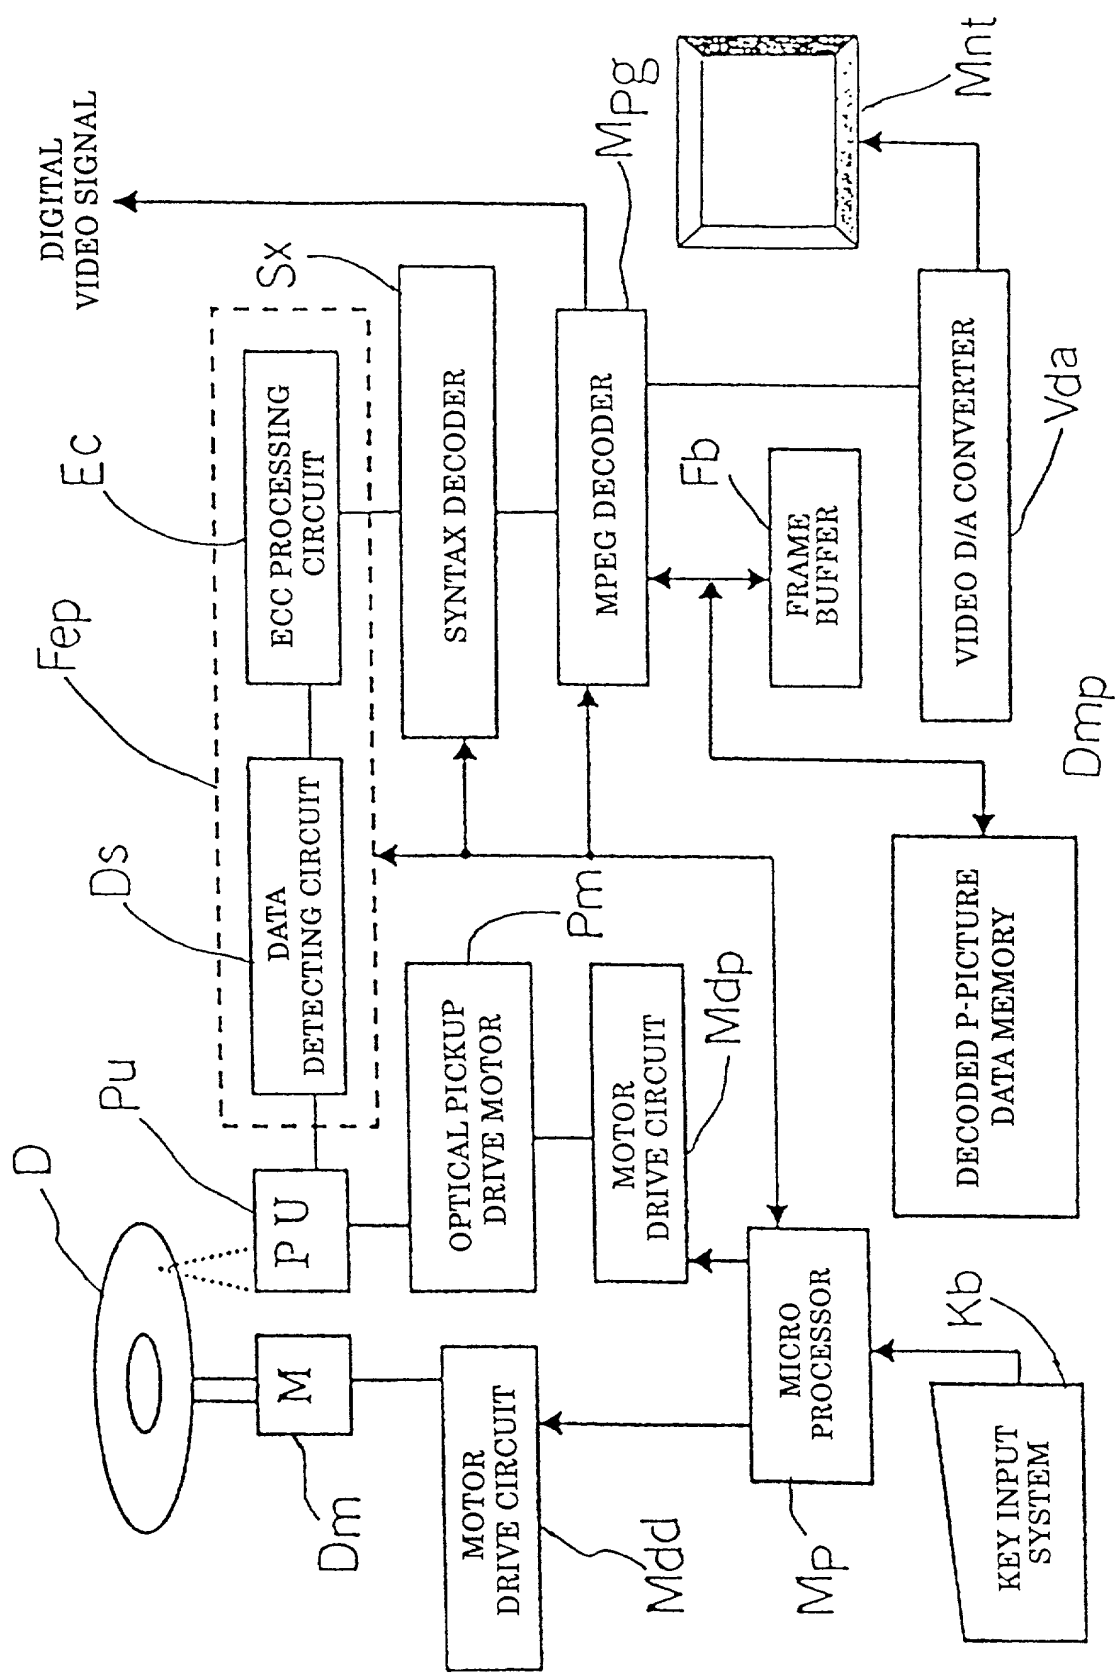


FIG. 8

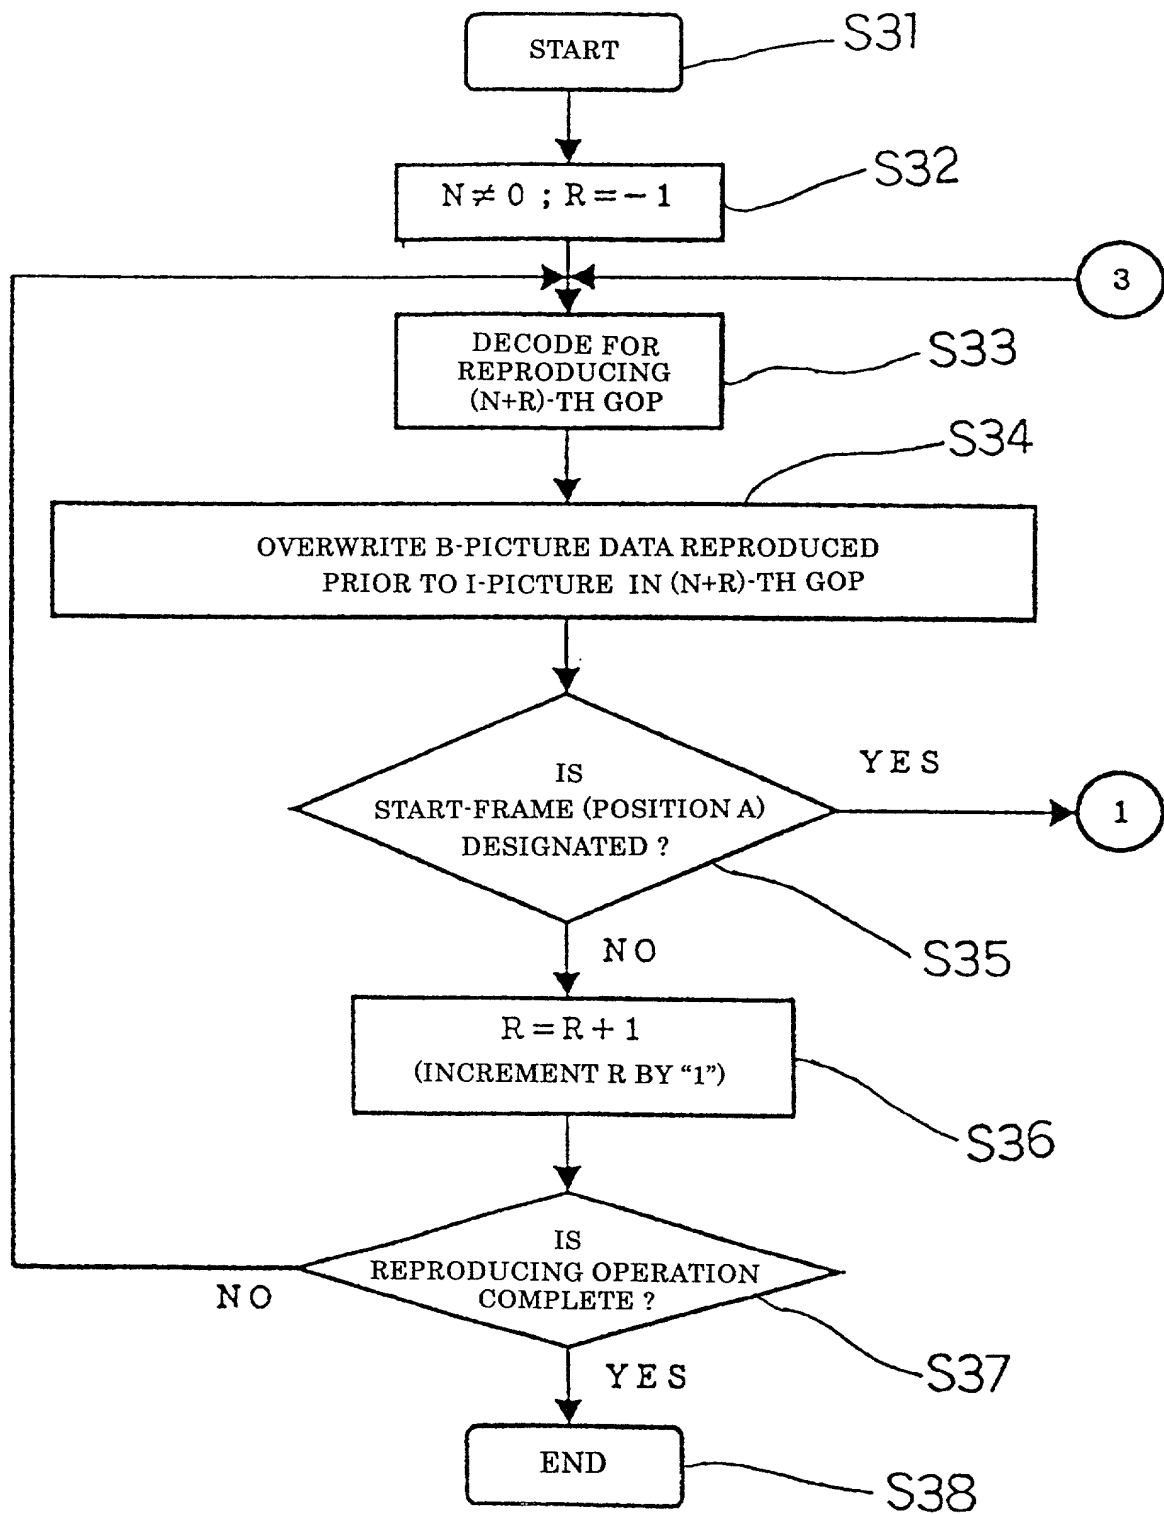


FIG. 9

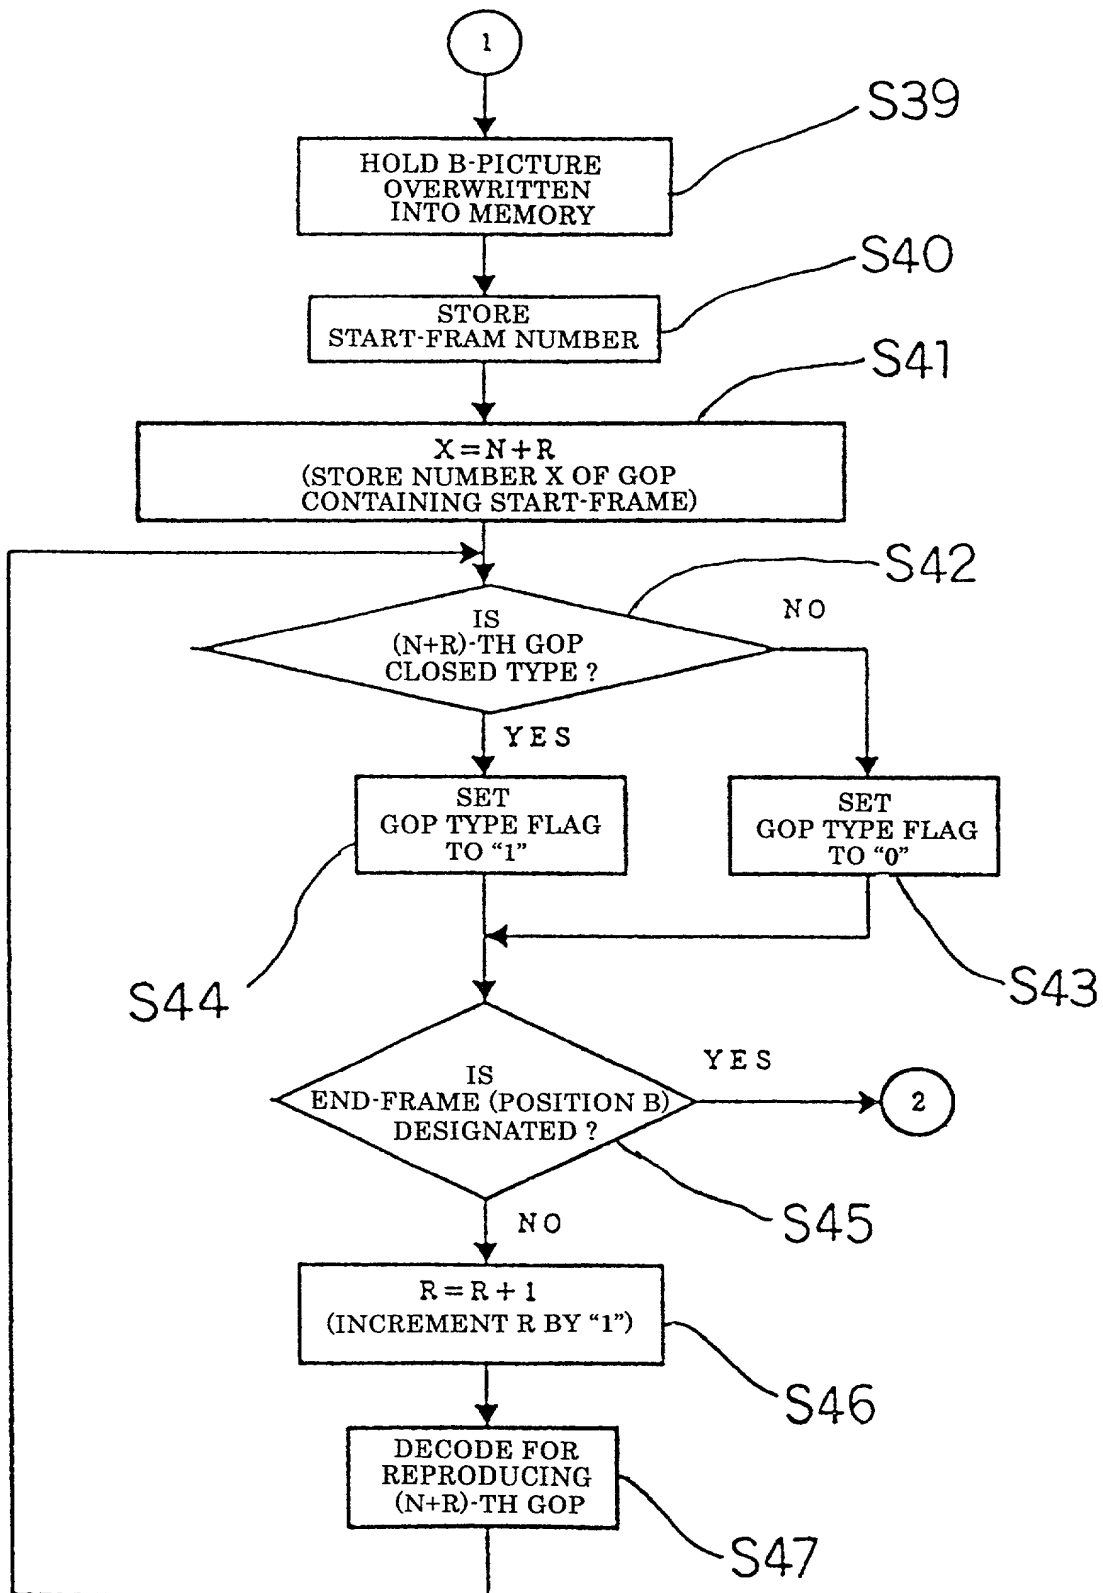


FIG. 10

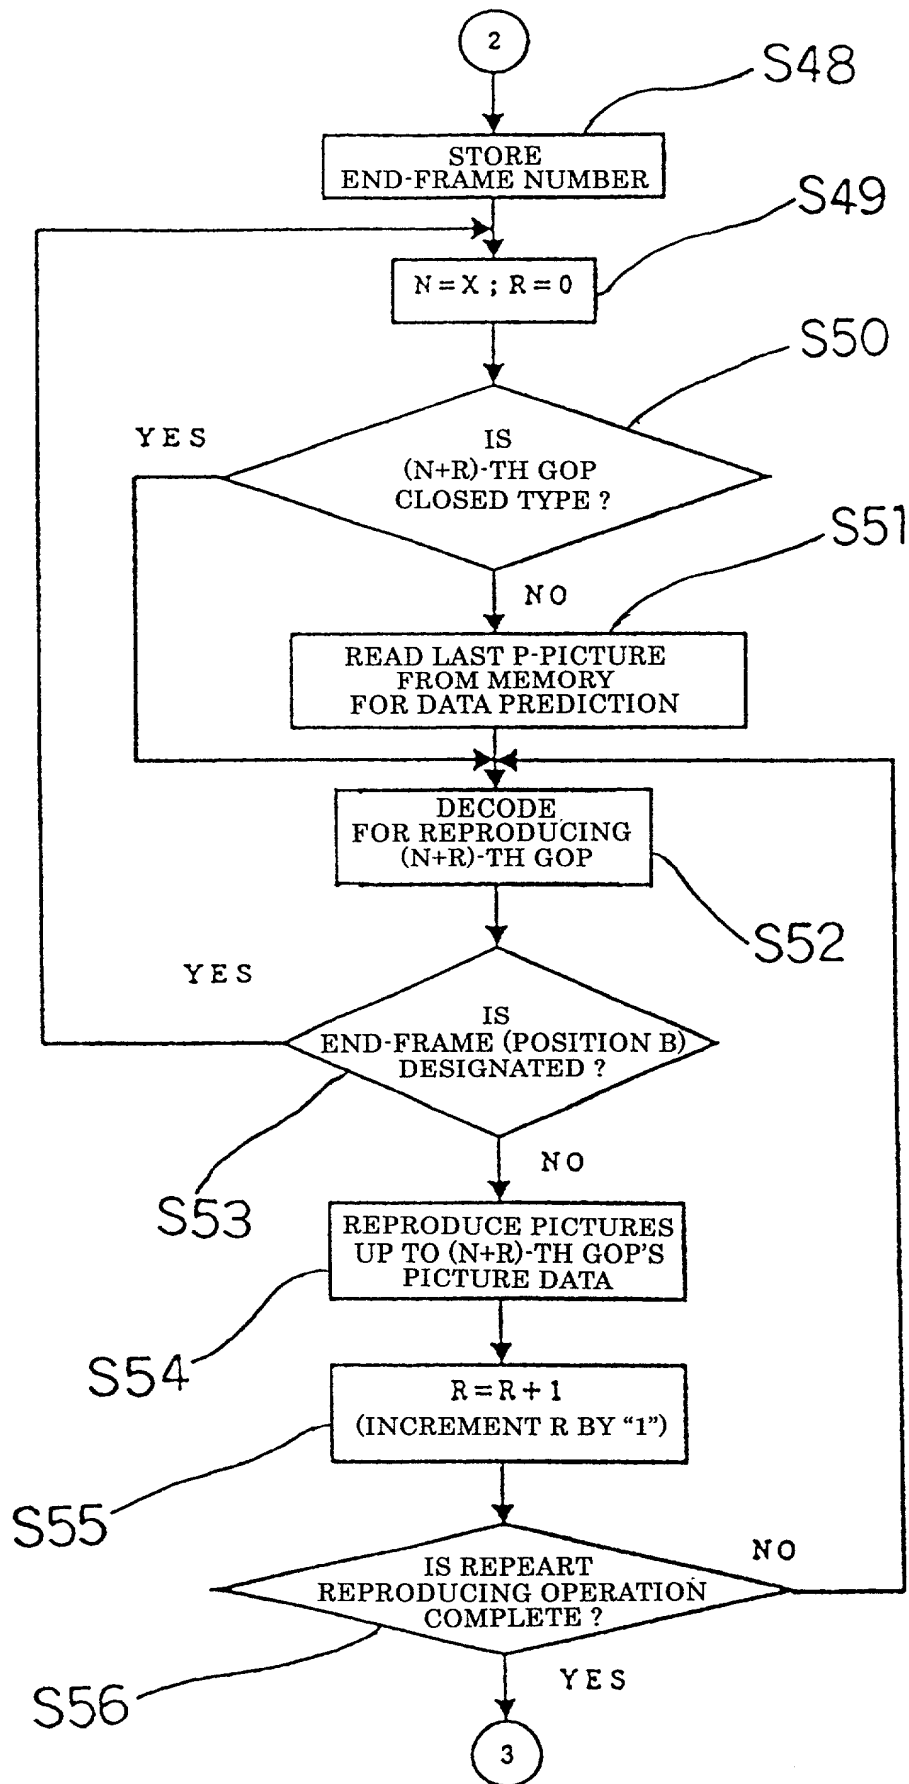


FIG. 11

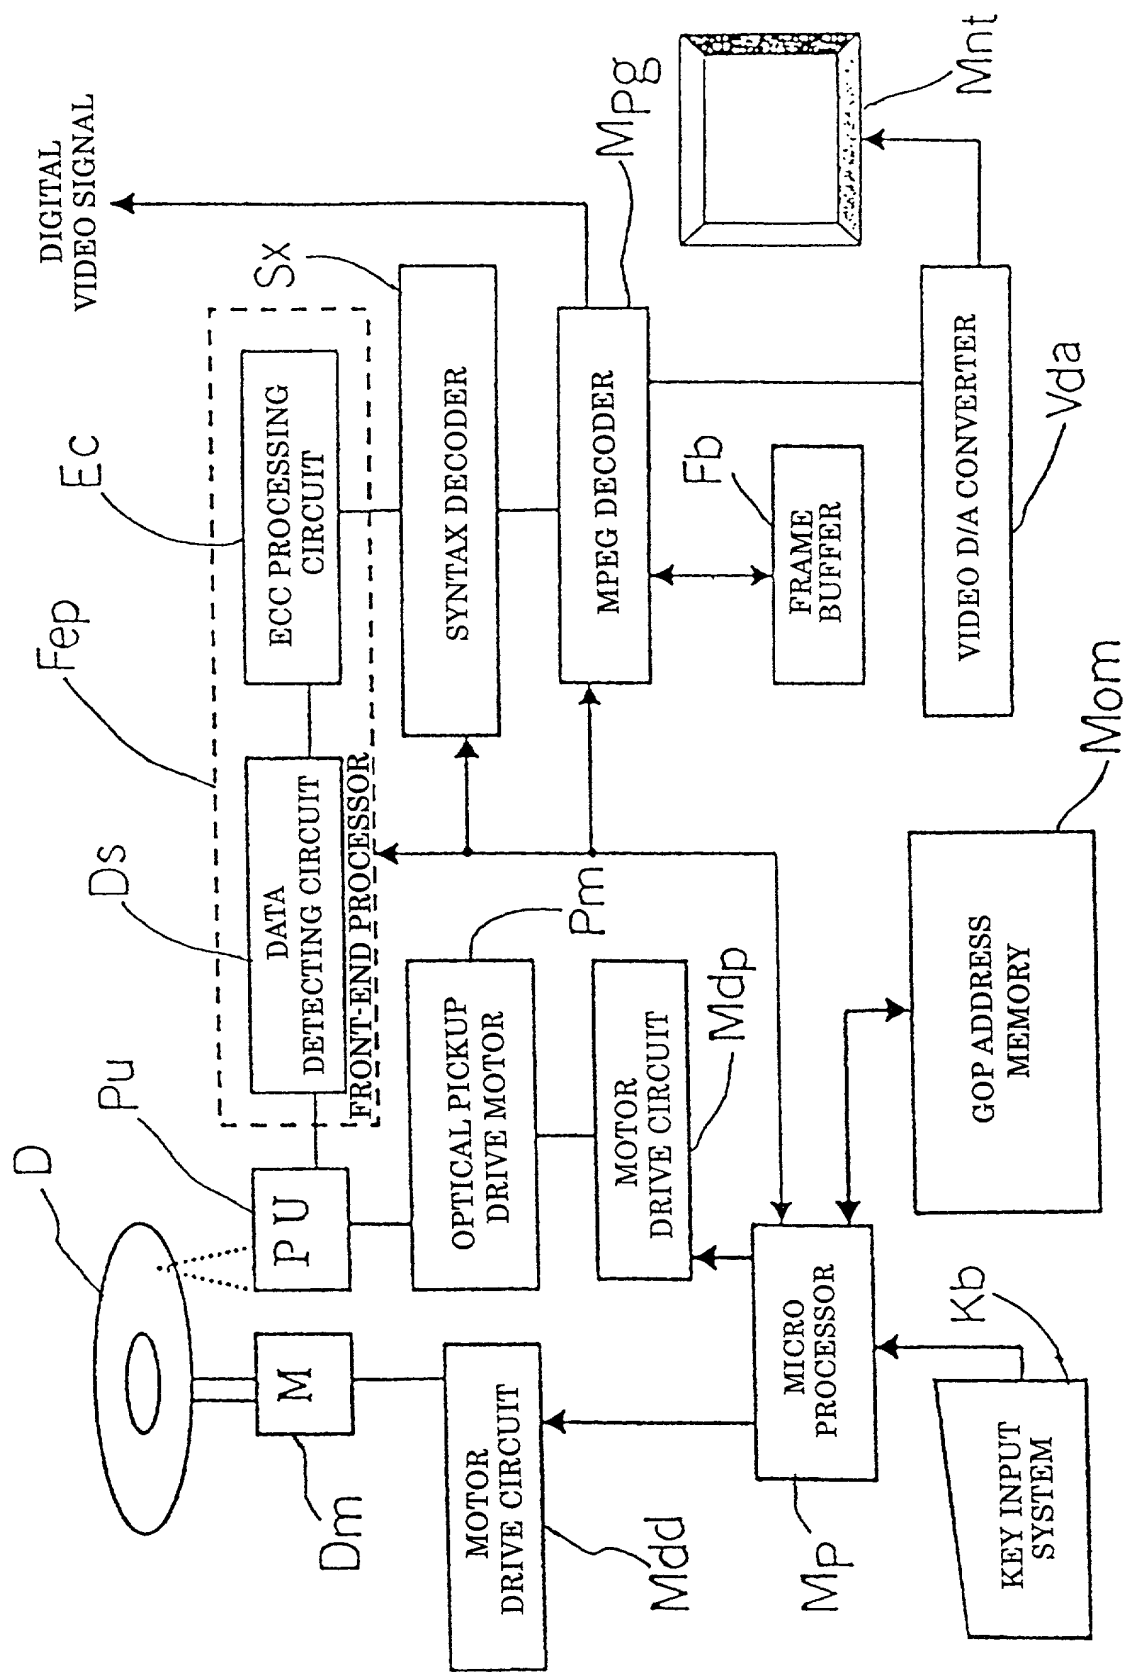


FIG. 12

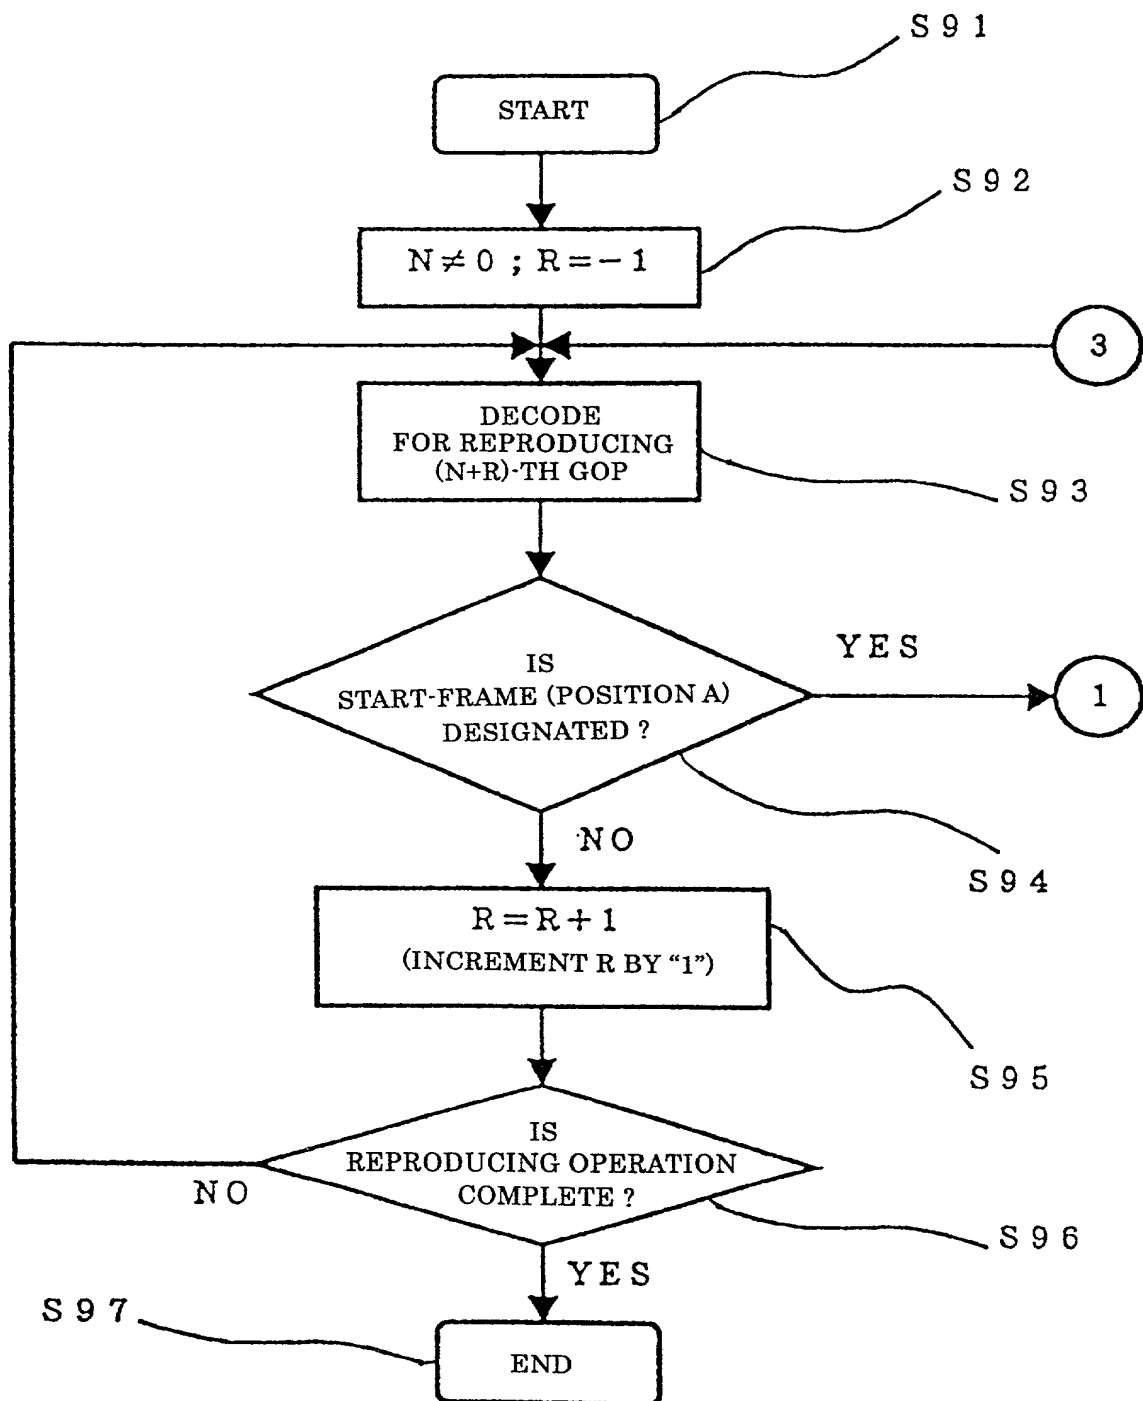


FIG. 13

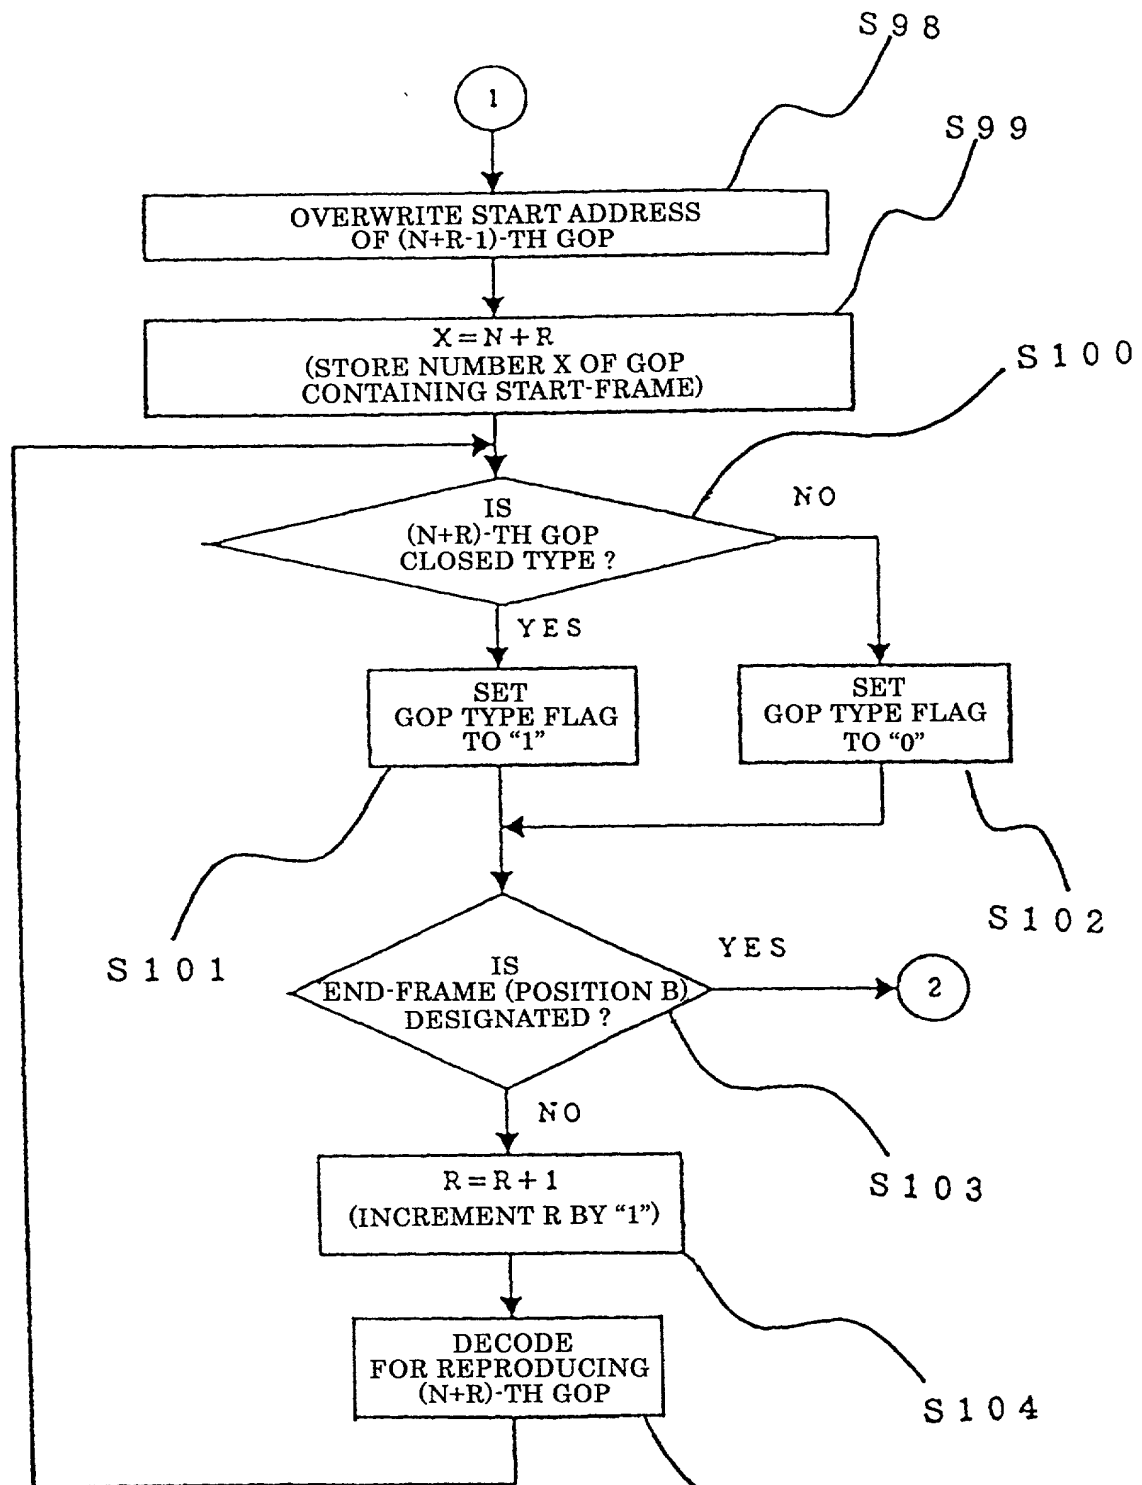


FIG. 14

S105

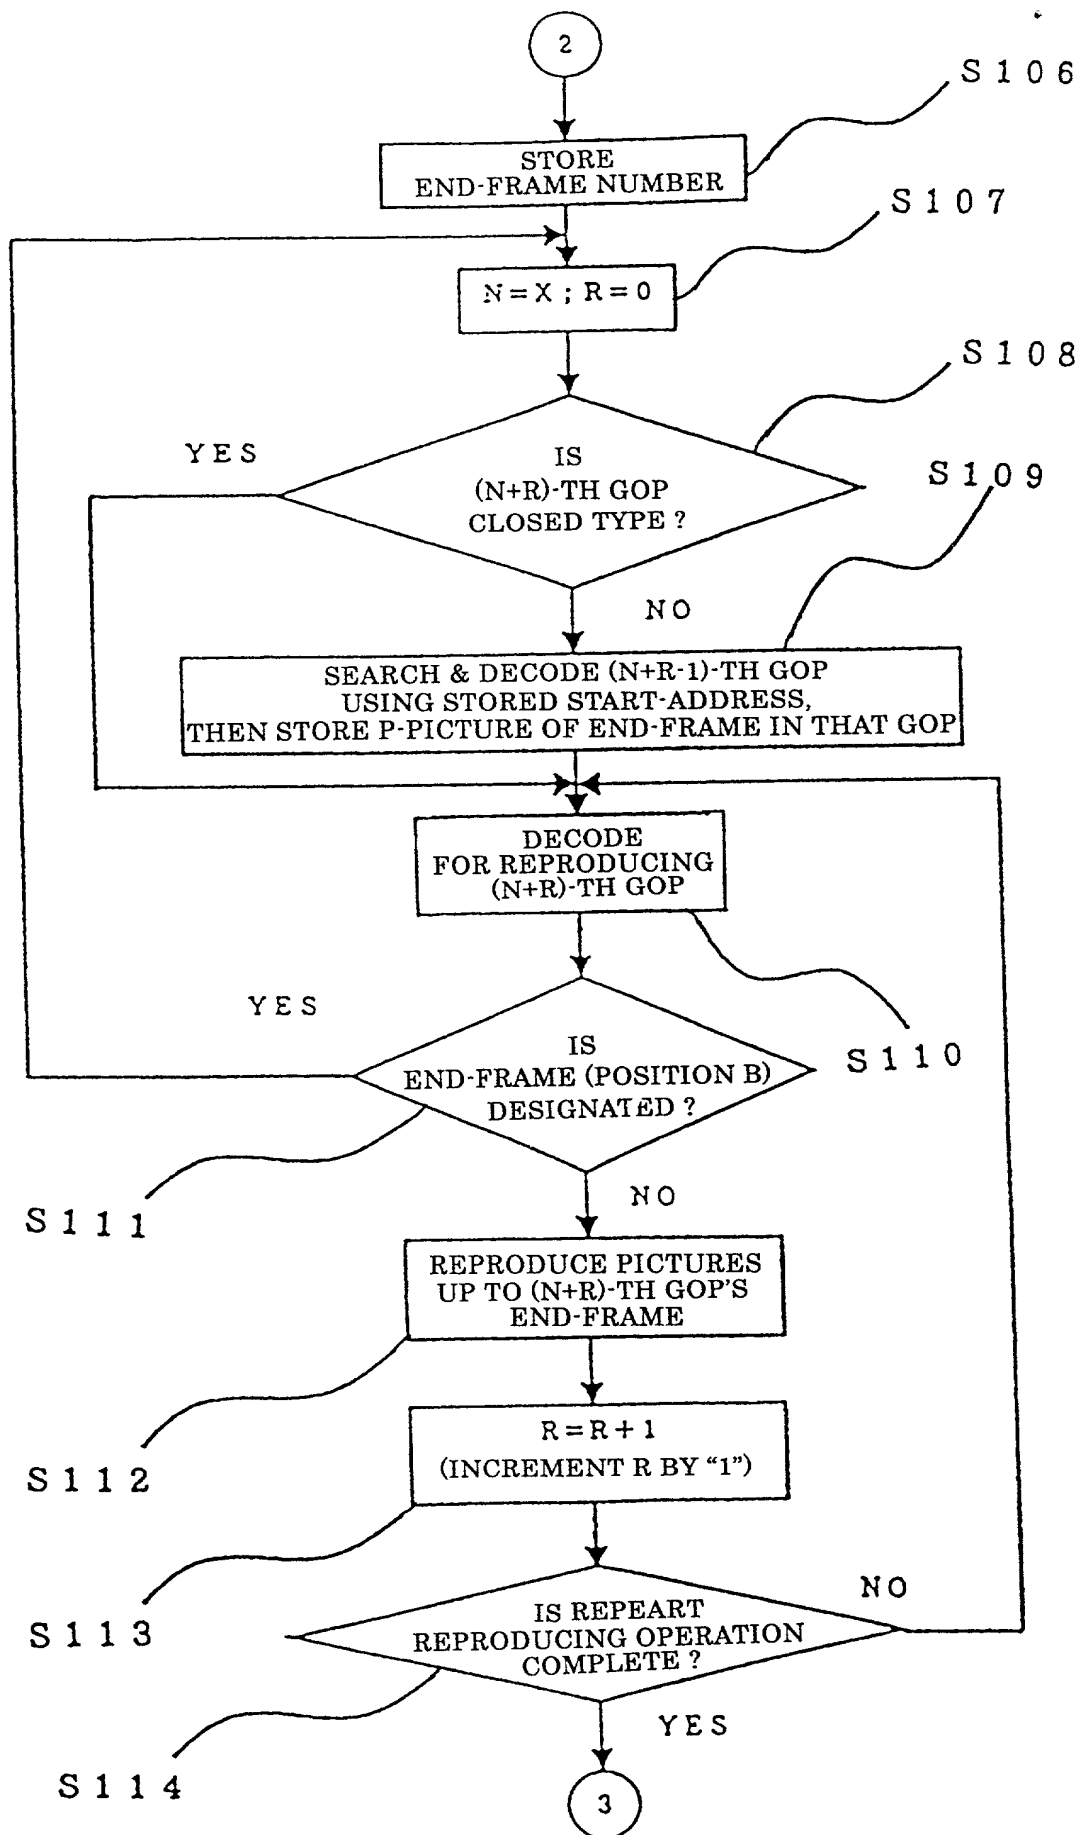


FIG. 15

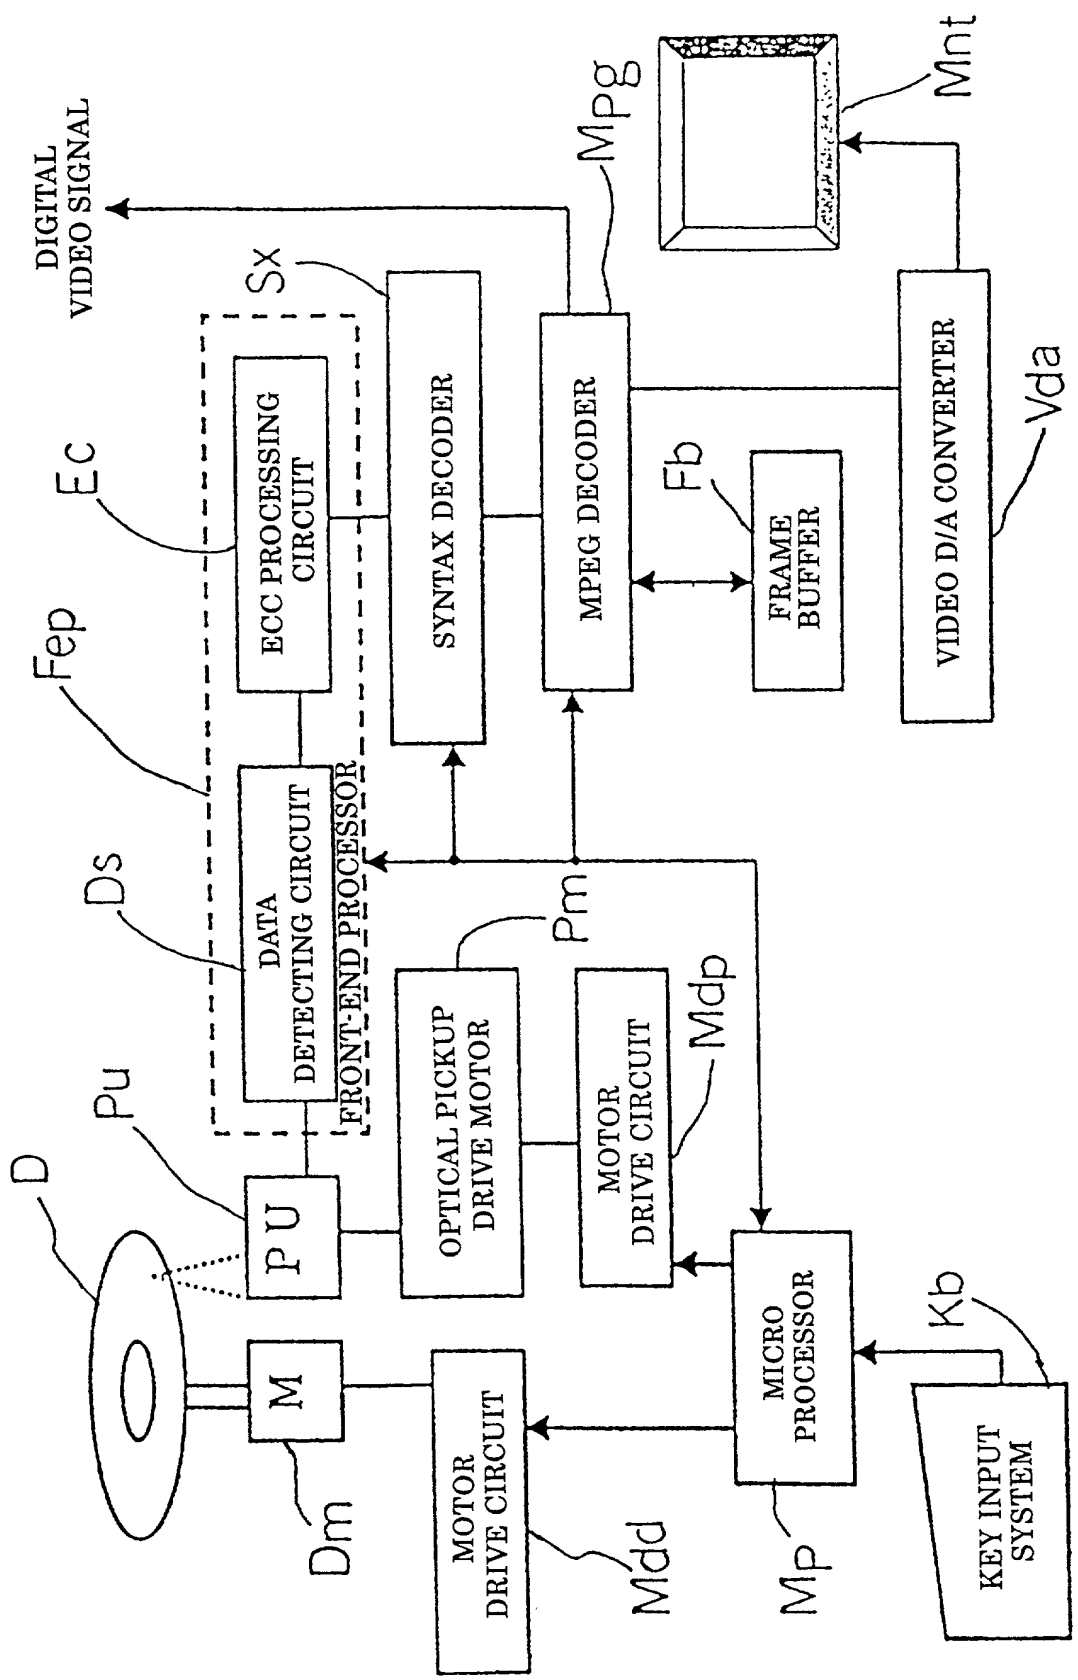


FIG. 16 (Prior Art)

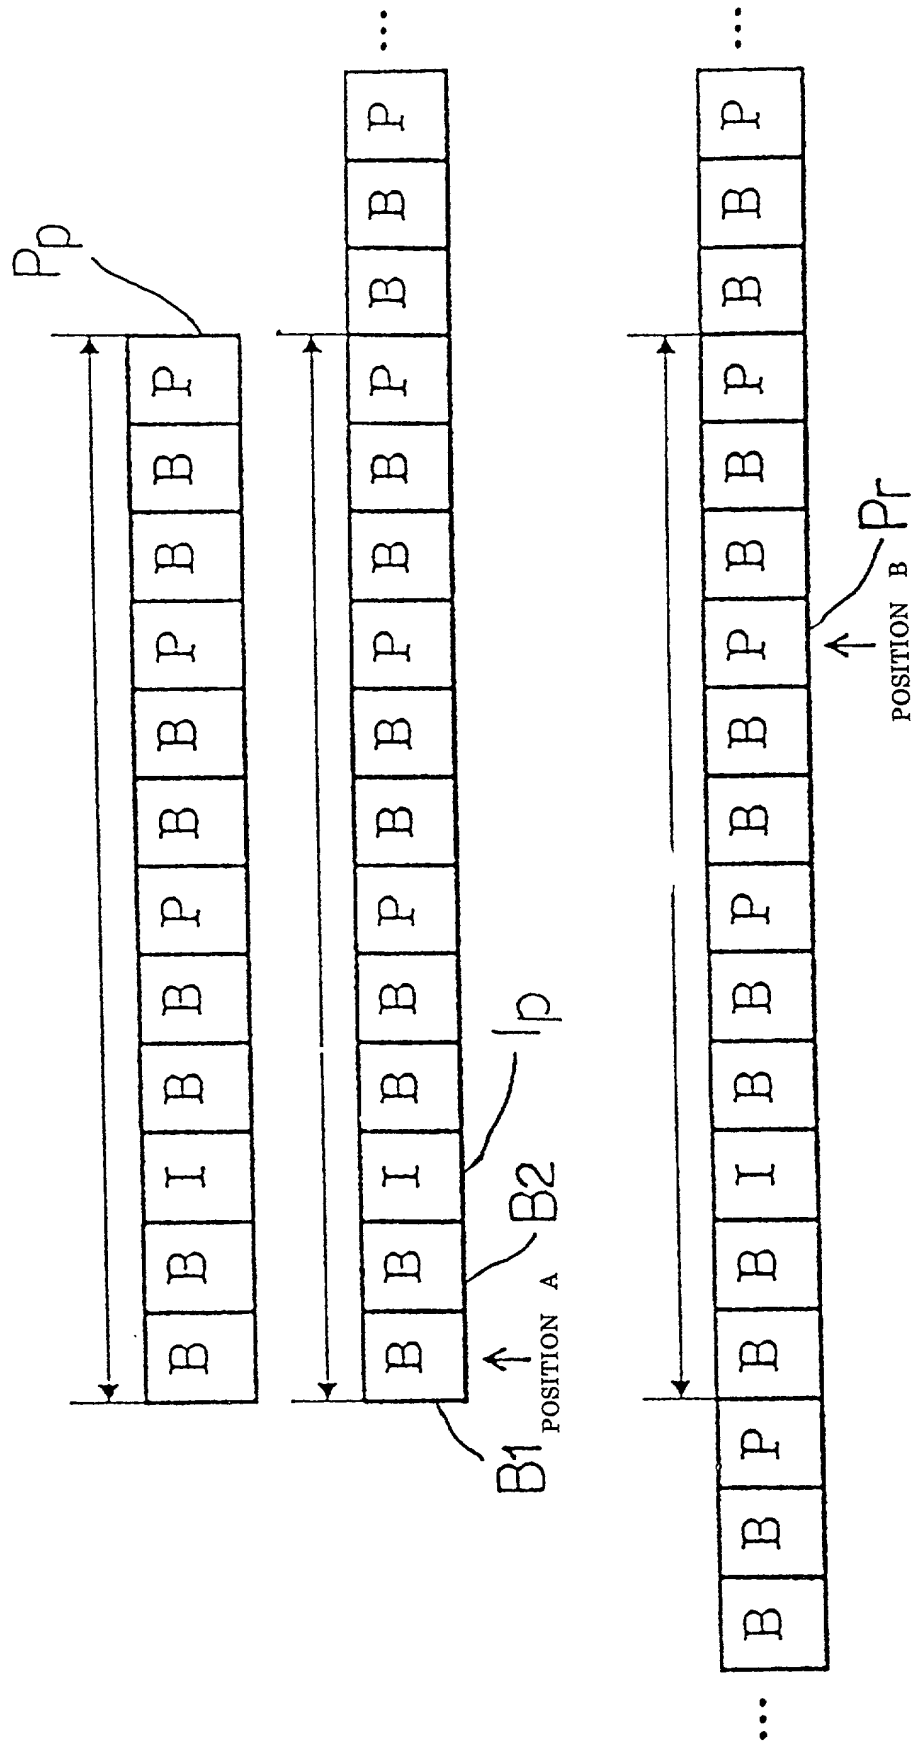


FIG. 17 (Prior Art)

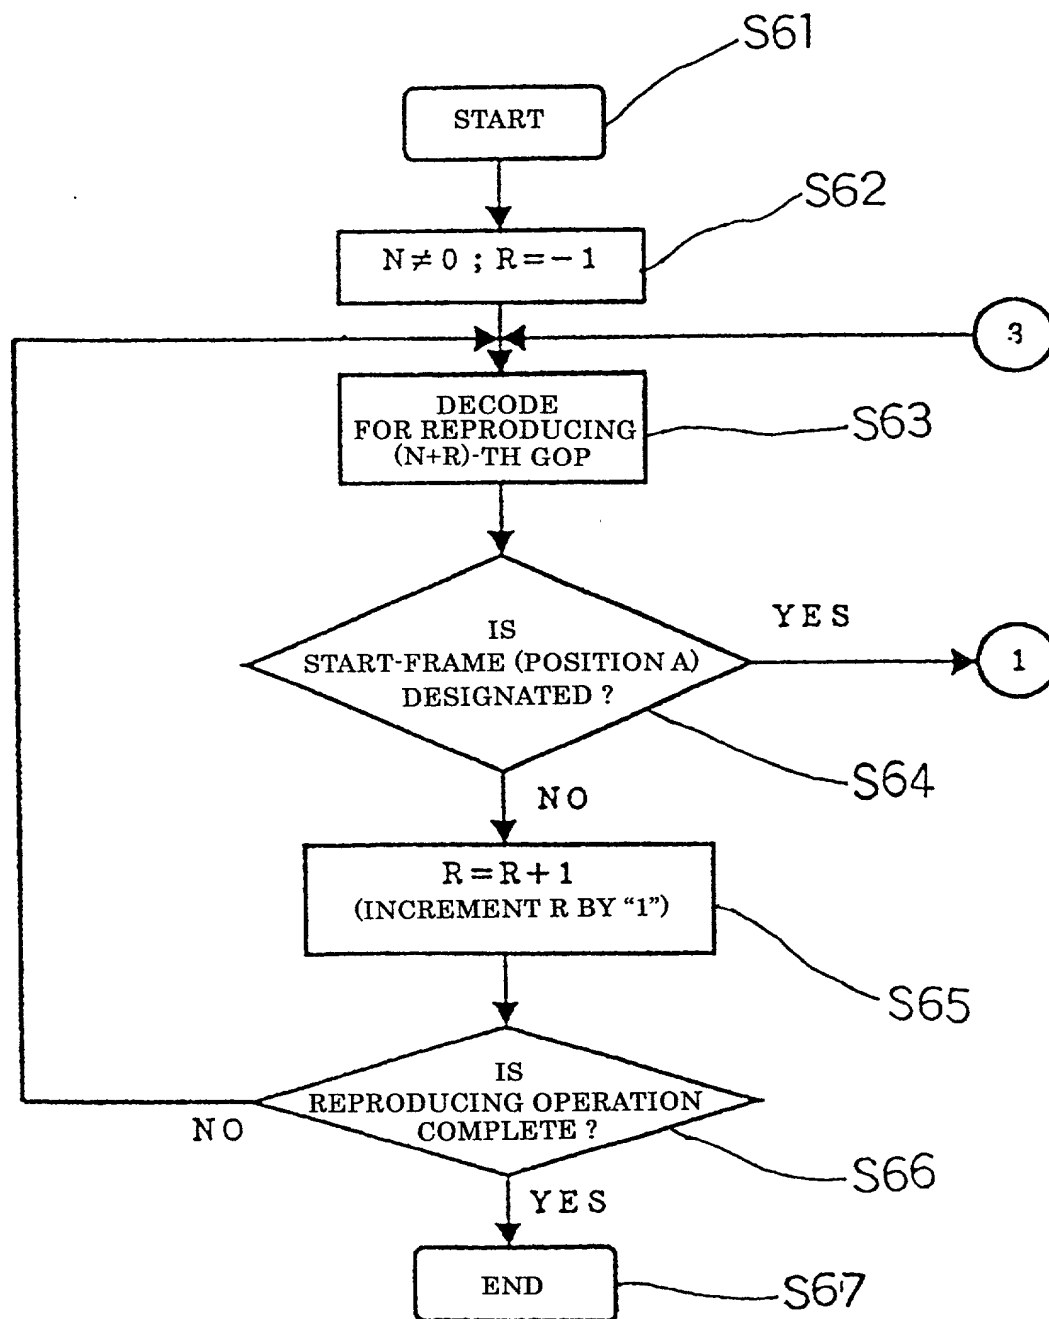


FIG. 18 (Prior Art)

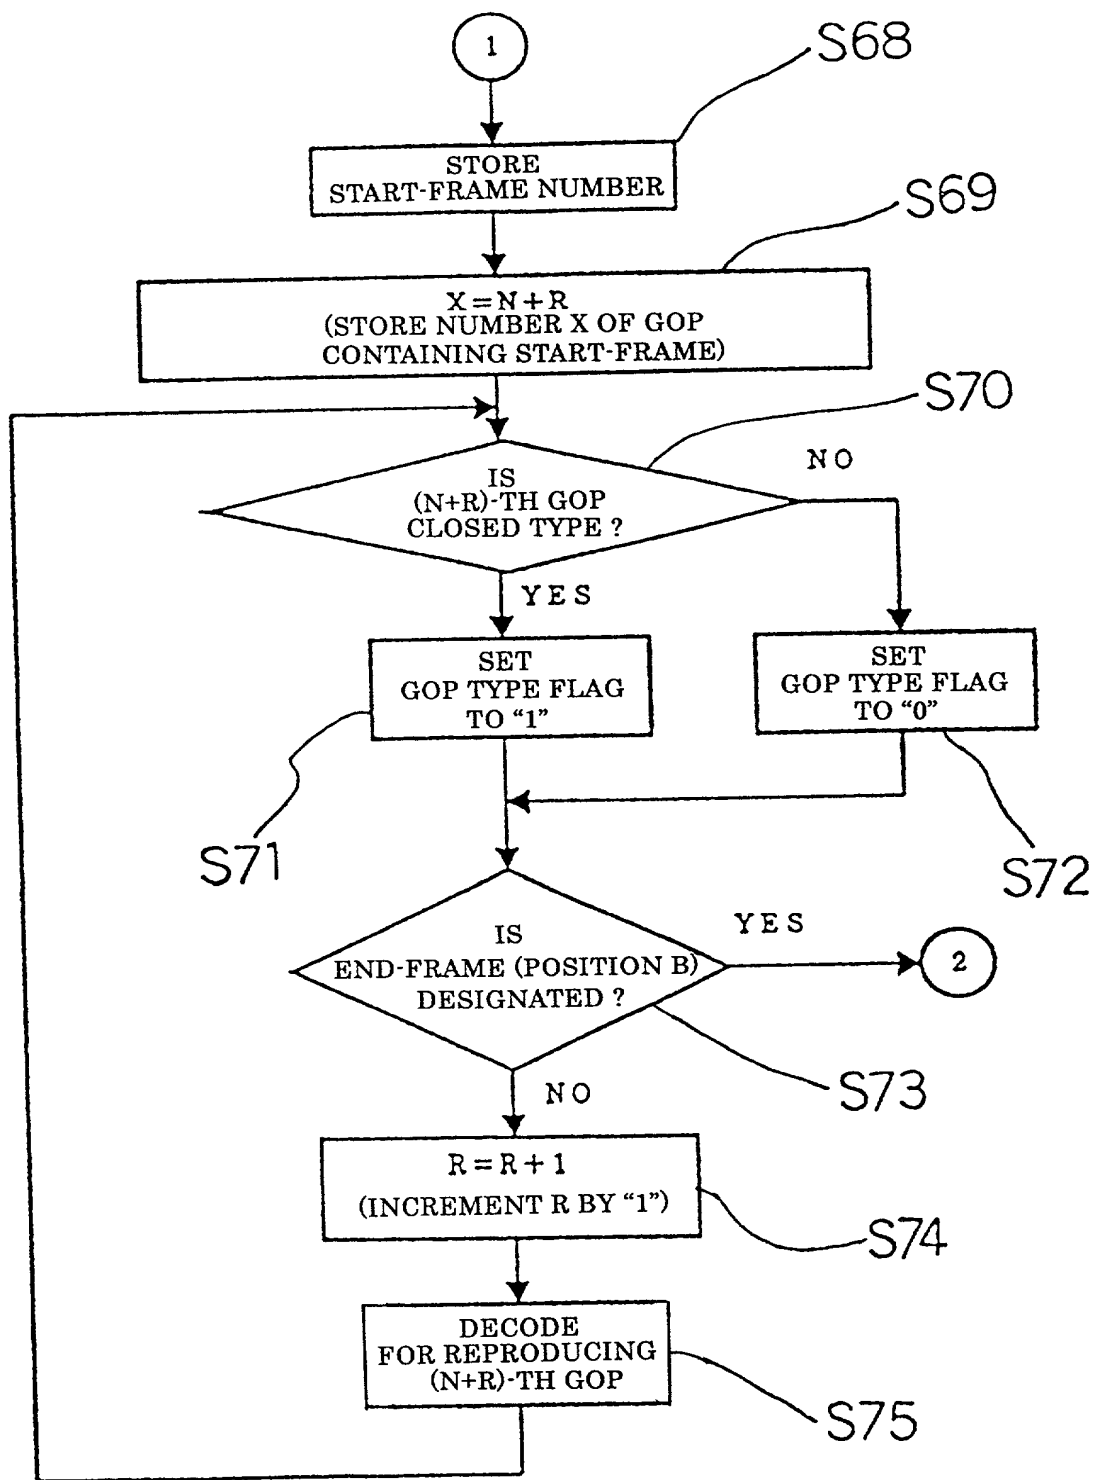


FIG. 19 (Prior Art)

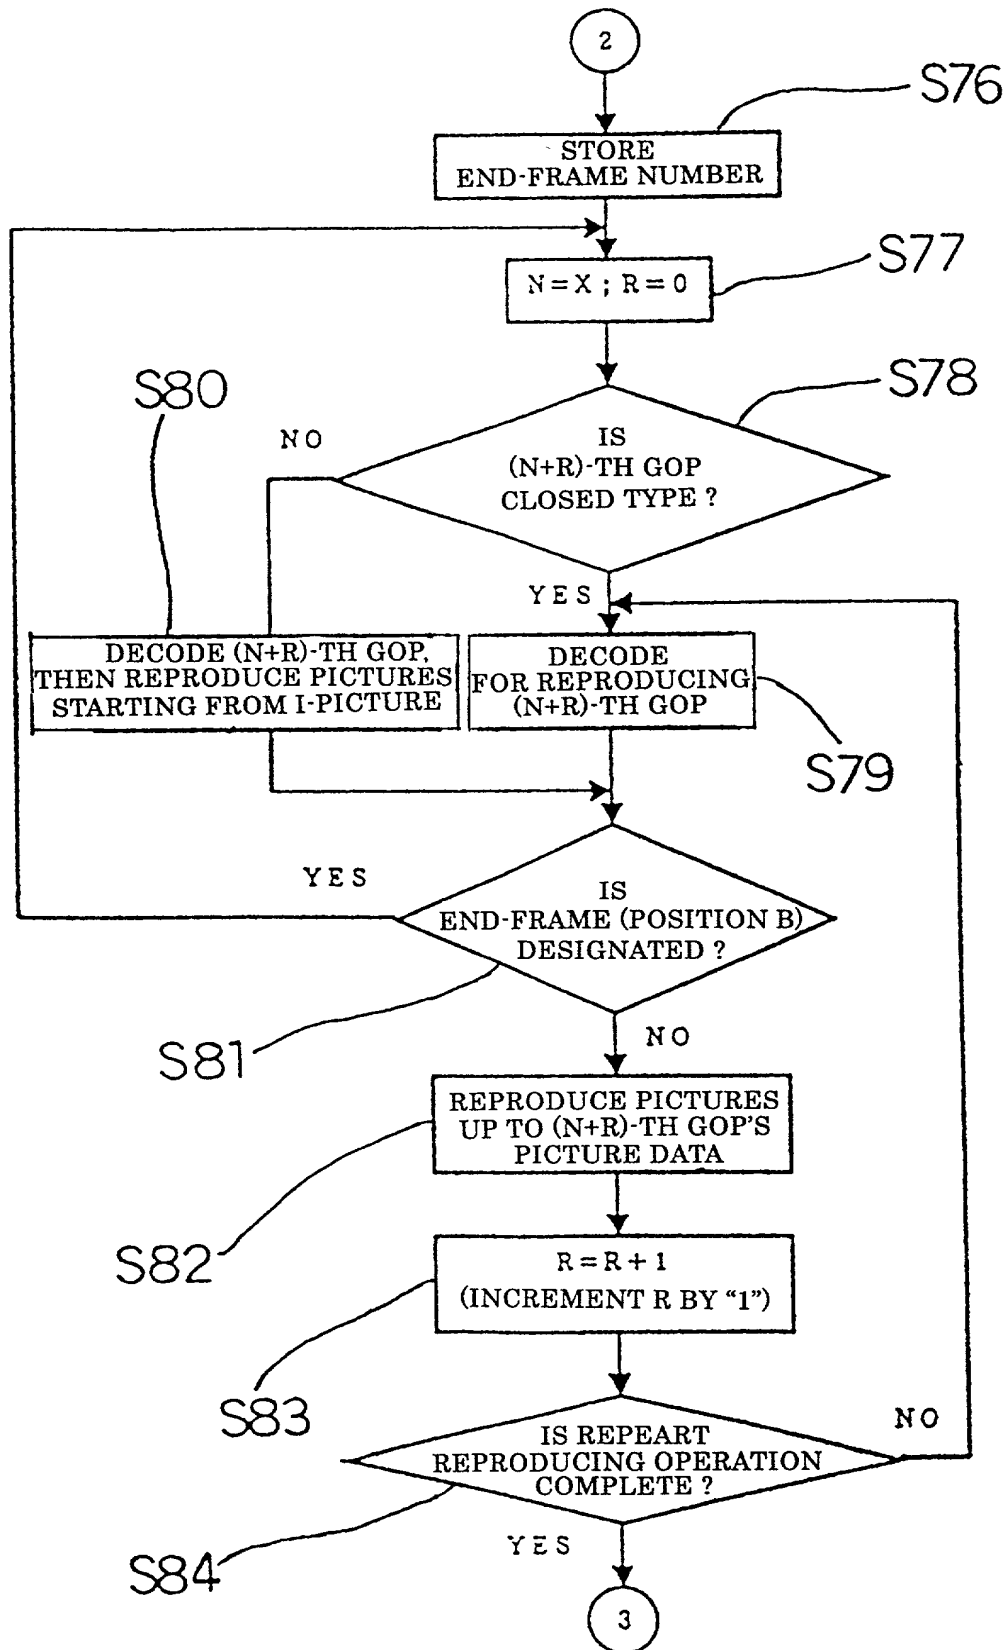


FIG. 20 (Prior Art)

FIG. 21 (Prior Art)

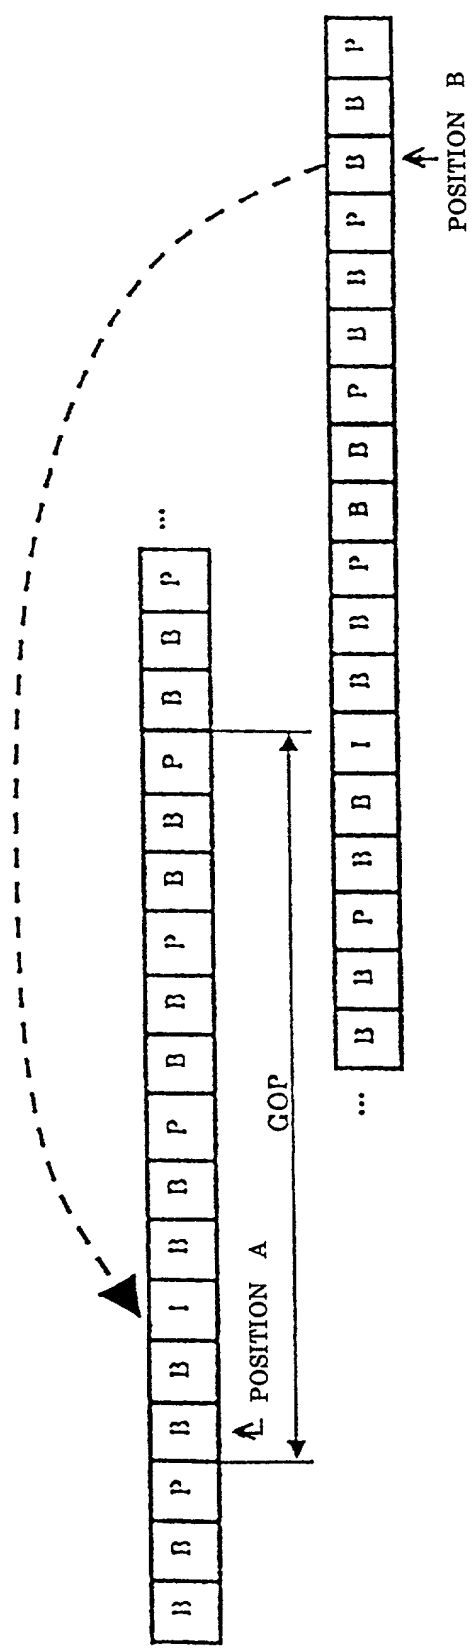


FIG. 21 (Prior Art)